


# **SF 1230™ Container Pressure Gauge**

### **Description**

The pressure gauge is mounted to each SF 1230 container to provide visual indication of the container pressure. The gauge scale is calibrated to show the actual pressure and is color-coded to show the following pressure ranges.

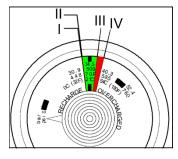

#### **Gauge Color Fields:**

**0 to I** = Recharge or below minimum storage temperature

I to II = Red

II to III = Green

III to IV = Red

**IV to M** = Overcharge or above maximum storage temperature



#### **Gauge Indicating Range:**

I = Pressure at minimum temperature 32°F (0°C)

II to III = Pressure from 90% to 110% of working pressure at 70°F (21°C)

IV = Pressure at maximum temperature 130°F (54°C)

The pressure gauge can be installed, removed or replaced on a charged container without removing the agent first.

## **Specifications**

Part Number	02-15807
Pressure Connection	1/8 in. NPT
Pressure Range	0 to 760 psi (0 to 52 bar)
Operating Temperature Range	32°F to 130°F (0°C to 54.4°C)
Working Pressure	500 psi (34.5 bar)
Туре	Bourdon Tube
Diameter	1.6 inches (40 mm)
Accuracy	±4% (±20 PSI) at charge
Materials	Polycarbonate Lens
	Brass Process Connection
	Stainless Steel Case
	EPDM Rubber Gasket
	Brass Pointer

### **Approvals**

- Underwriters Laboratories (UL)
- Underwriters Laboratories of Canada (ULC)
- Factory Mutual (FM)

For exact certification listings, please reference the respective agency web site.

P24595 Rev NC, 8/24 Page 1 of 1

This document is not to be used for installation purposes and is subject to Fike's full disclaimer at fike.com/disclaimer. Fike reserves the right to change product design or specifications without obligations and without further notice.